

Pushbutton. Multi-function operation.

- (1) Power On. Press briefly once.
- (2) Reset. Press briefly during operation to reset audio tone.
- (3) Power Off. and Battery Status.
 - * Battery. Audio beeps several times. 4 beeps good, 1 beep replace.
 - * 2-3 beeps indicate battery is OK, but wearing.
 - * Powers Off immediately afterwards beeps.

Audio Speaker Indication.

- (a) Quiet until metal object enters sensing field.
- (b) Sound is then emitted and rises as metal object is approached.
 - * Rising tone for valuables and other non-ferrous metal.
 - * Ferrous object emits broken tone as it gets closer to spade tip.

Replacing Battery.

- (1) Tip end-cap outwards using your finger nail or metal blade.
 - * Then grab cap and carefully pull it out of handle.
 - * Remove 9 volt battery and unsnap terminal cap.
 - * Snap terminal cap to new battery and carefully insert it into handle.
 - * Tuck wire leads back into handle as you position end-cap in place.
 - * Note: Make sure that all wire leads are inside as you push cap in place.

Automatic Functions.

Powers OFF after 5 minutes of inactivity.

Notes:

Water-Resistant construction. Be careful of the sharp toothed spade with your hands. One year Limit Warrantee.

Intex Systems Corp.

www.intexsystemscorp.com